

VCLFO Calibration

Adjust the output amplitude of each LFO with corresponding trimmer potentiometer R23 (LFO1), R47 (LFO2) to -5V ... +5V.